

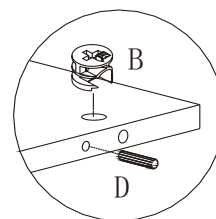
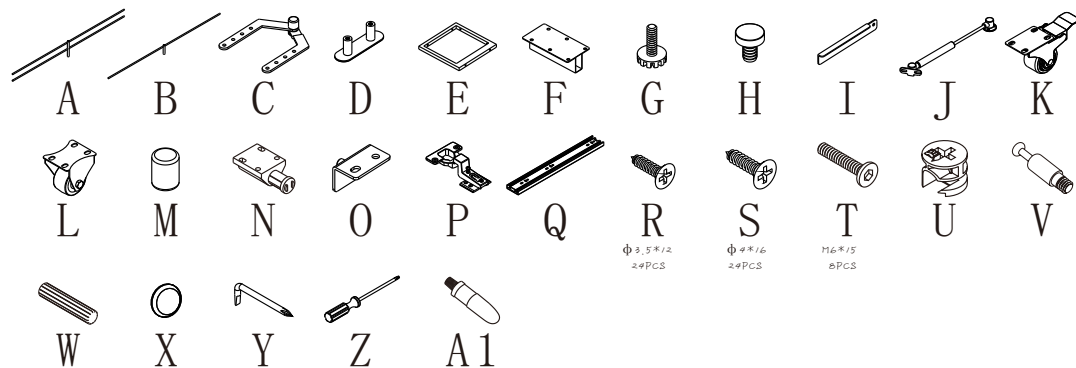


17-36#BQU

1204*660*2120H

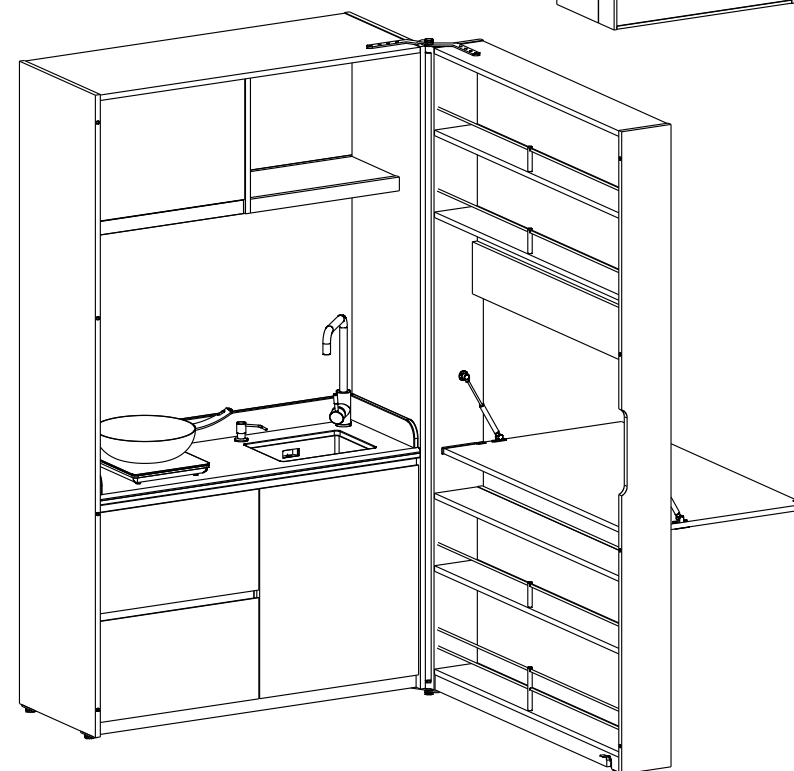

Do not put the Dowels in the Cam Screw holes!

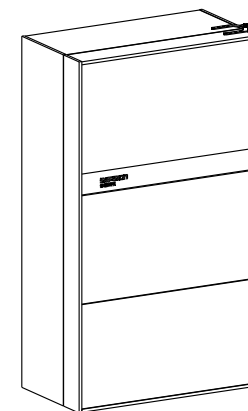

ASSEMBLY INSTRUCTION
Assembling as number order!

