


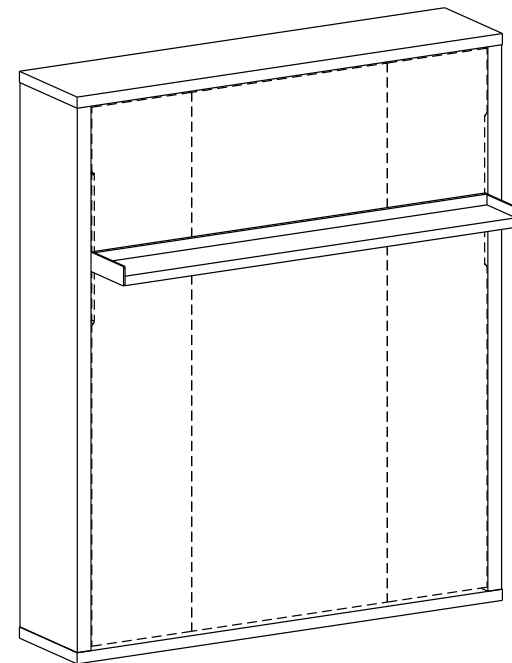

Assembly Manual


FJ-R2 Vertical Tilting Bed

UN-1511 Hardware




Hardware List

Exterior Standing Frame Fitting

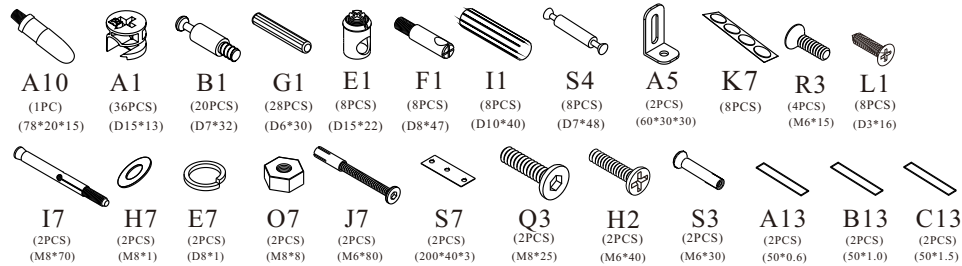

Bedframe Fitting


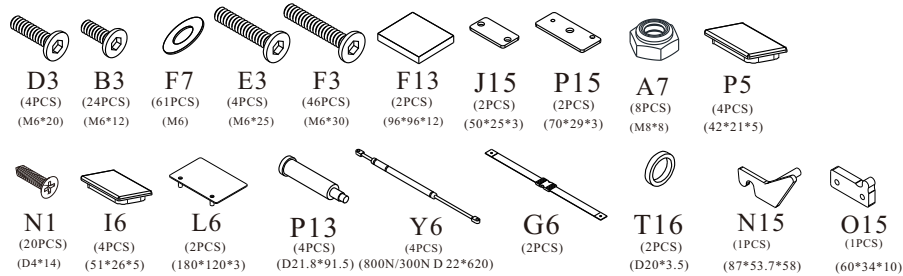


Bookshelf Fitting



Pre-assembled Fitting

There hardware have been assembled into the unit,so you don't need to look for them into the bags

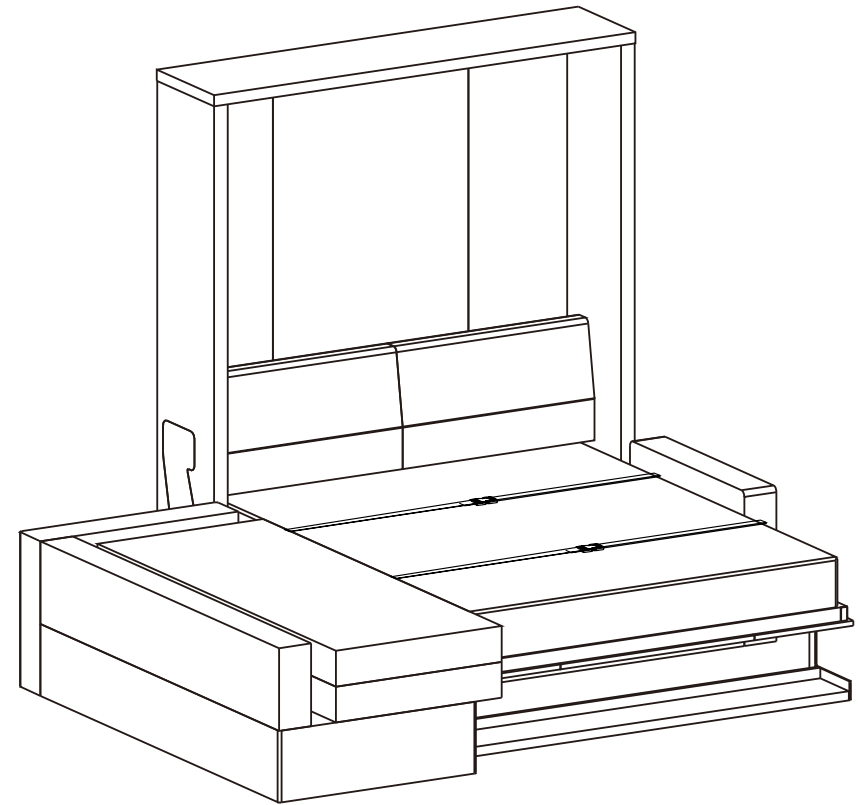
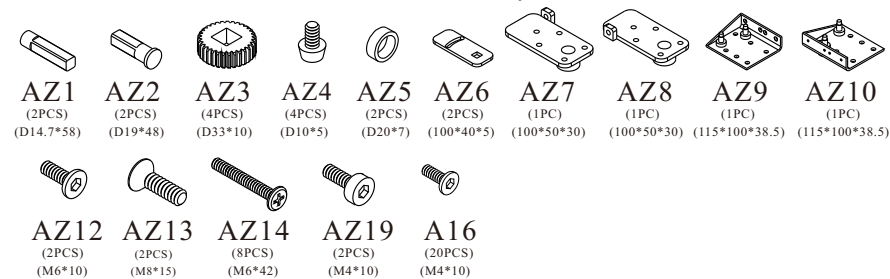


NOTE:


- A. CHILDREN (BELOW 18 YEARS OLD) ARE FORBIDDEN USING THIS FURNITURE.
- B. WHEN FOLDING DOWN THE BED, STAY AWAY FROM THE BENEATH OF THE BED. WHEN FOLDING UP THE BED, STAY AWAY FROM THE MATTRESS. MIND THE GAP AND THE BOOK SHELF HOLDERS DURING THE MOTION OF THE BED.






Panels and Bedframe:

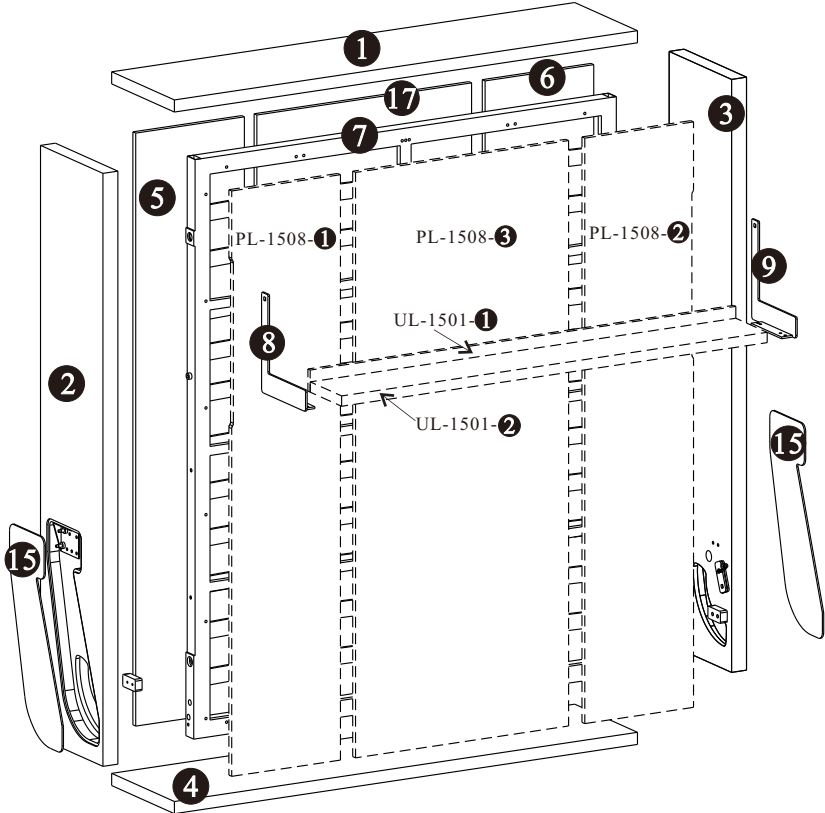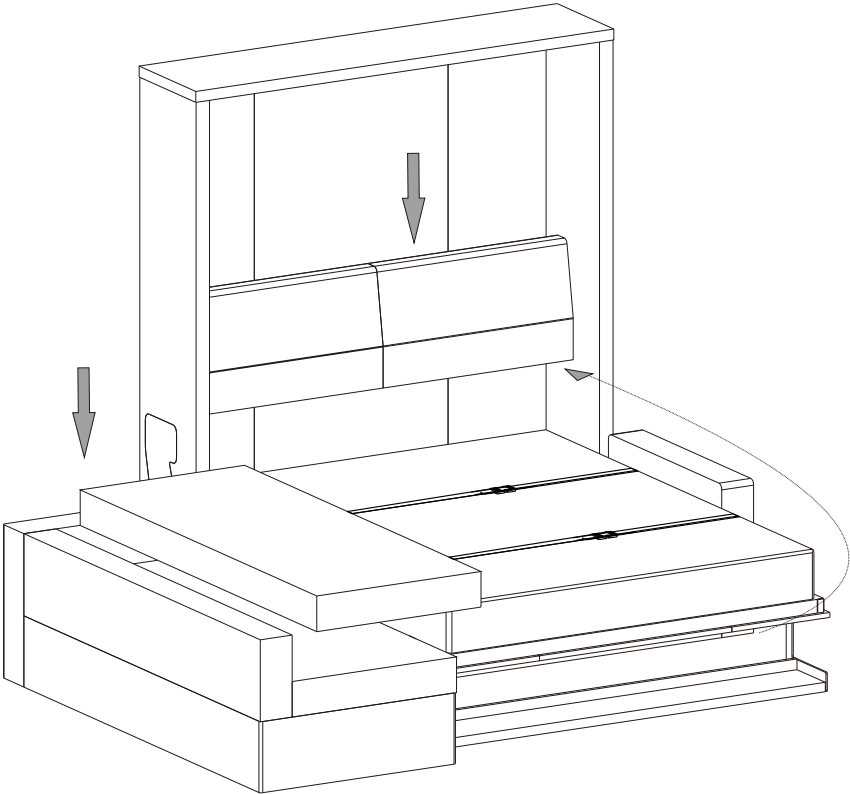


Exterior Standing Frame Fitting


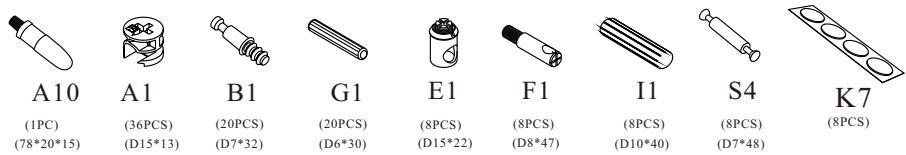


Pre-assembled Fitting

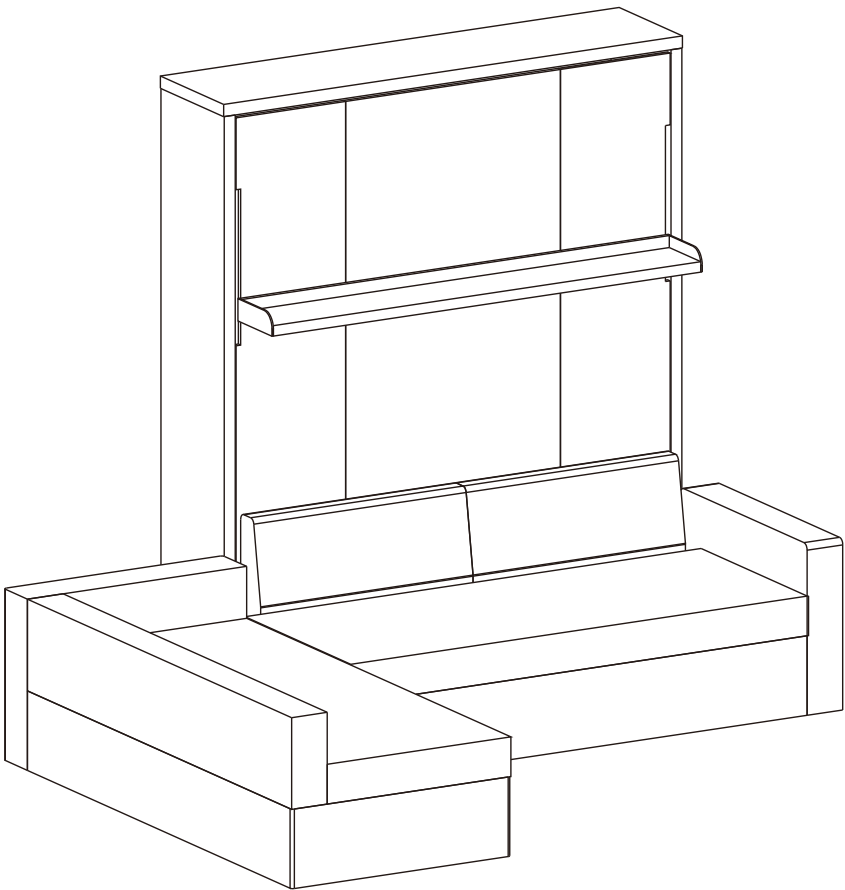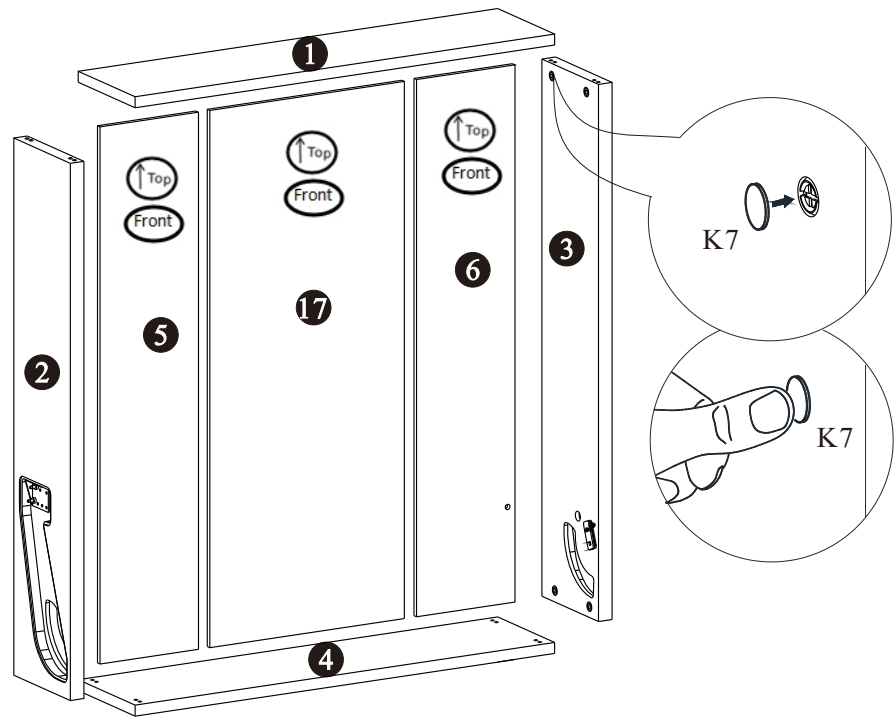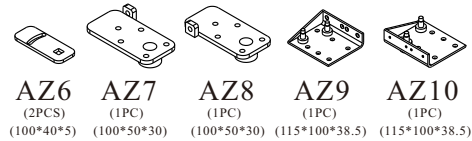

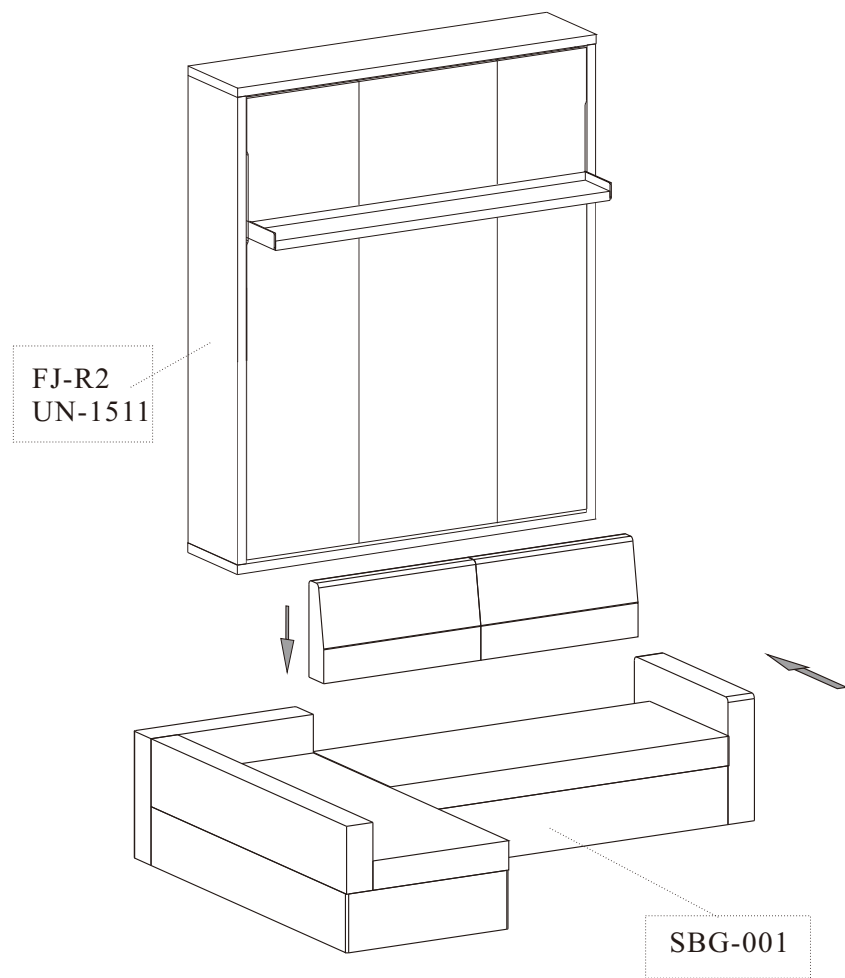

Step 1

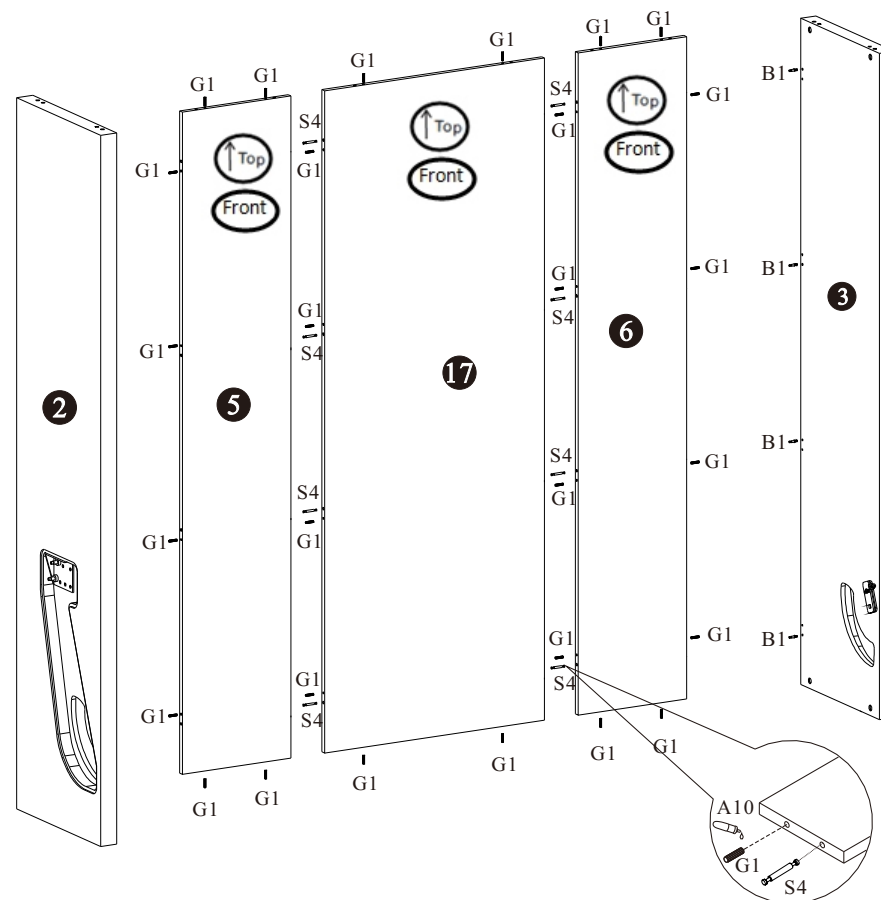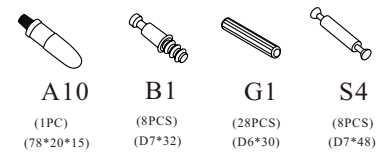

Step 2

- 



A10
(1PC)
(78*20*15)
- 

B1
(12PCS)
(D7*32)
- 



E1
(8PCS)
(D15*22)
- 

F1
(8PCS)
(D8*47)
- 


I1
(8PCS)
(D10*40)

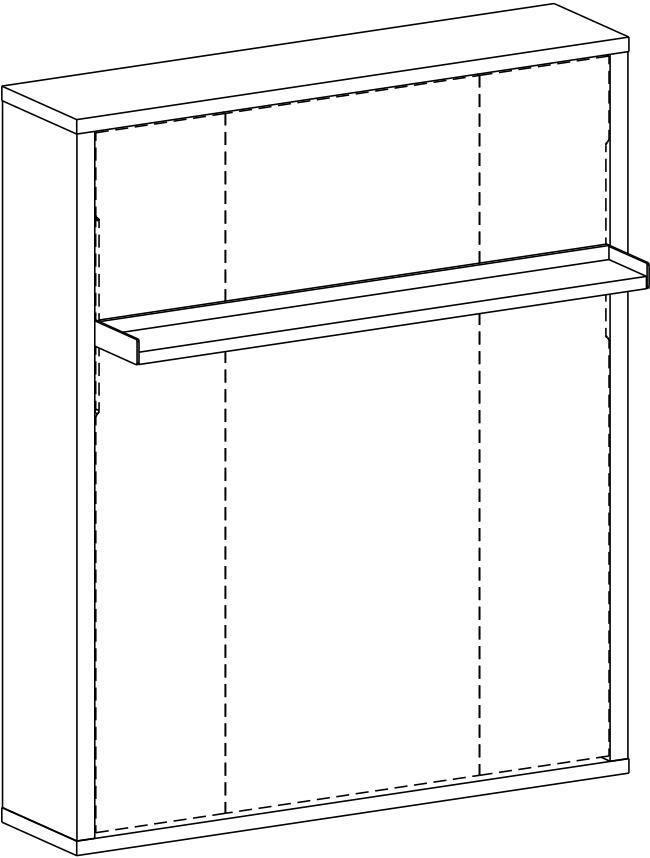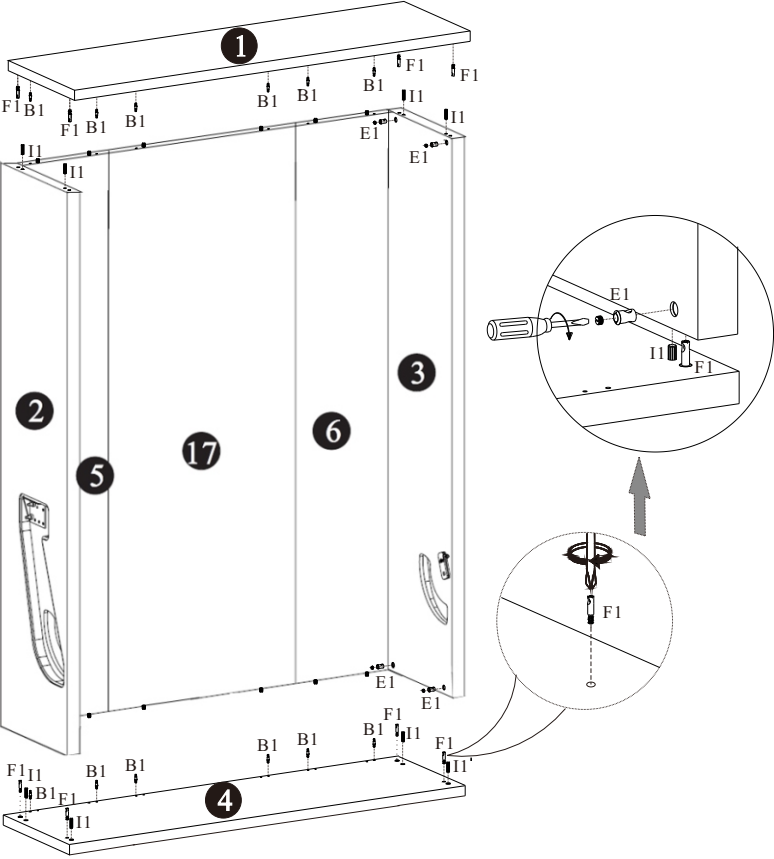

Step 18

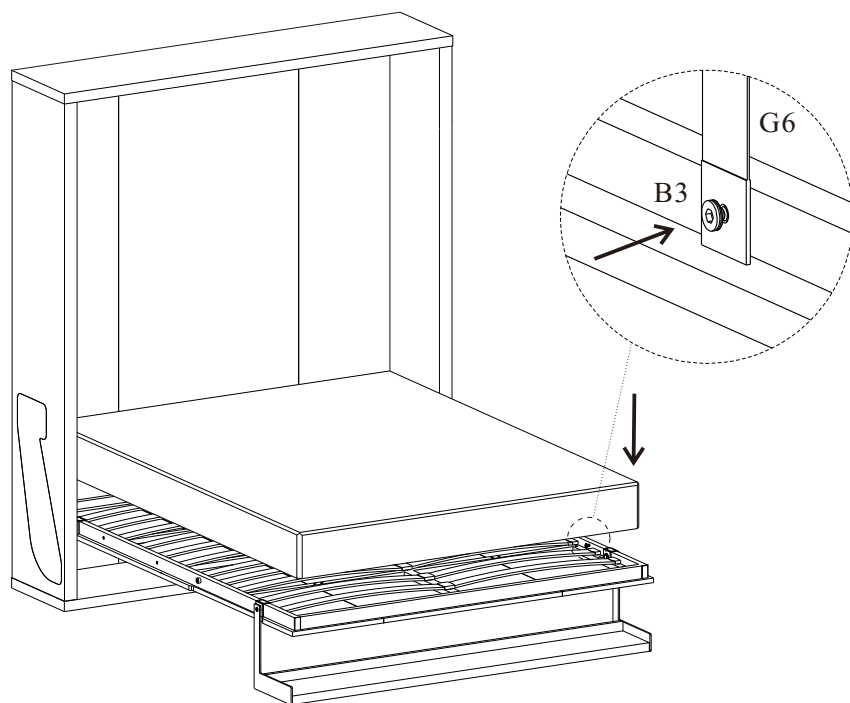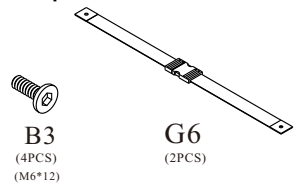

Step 3

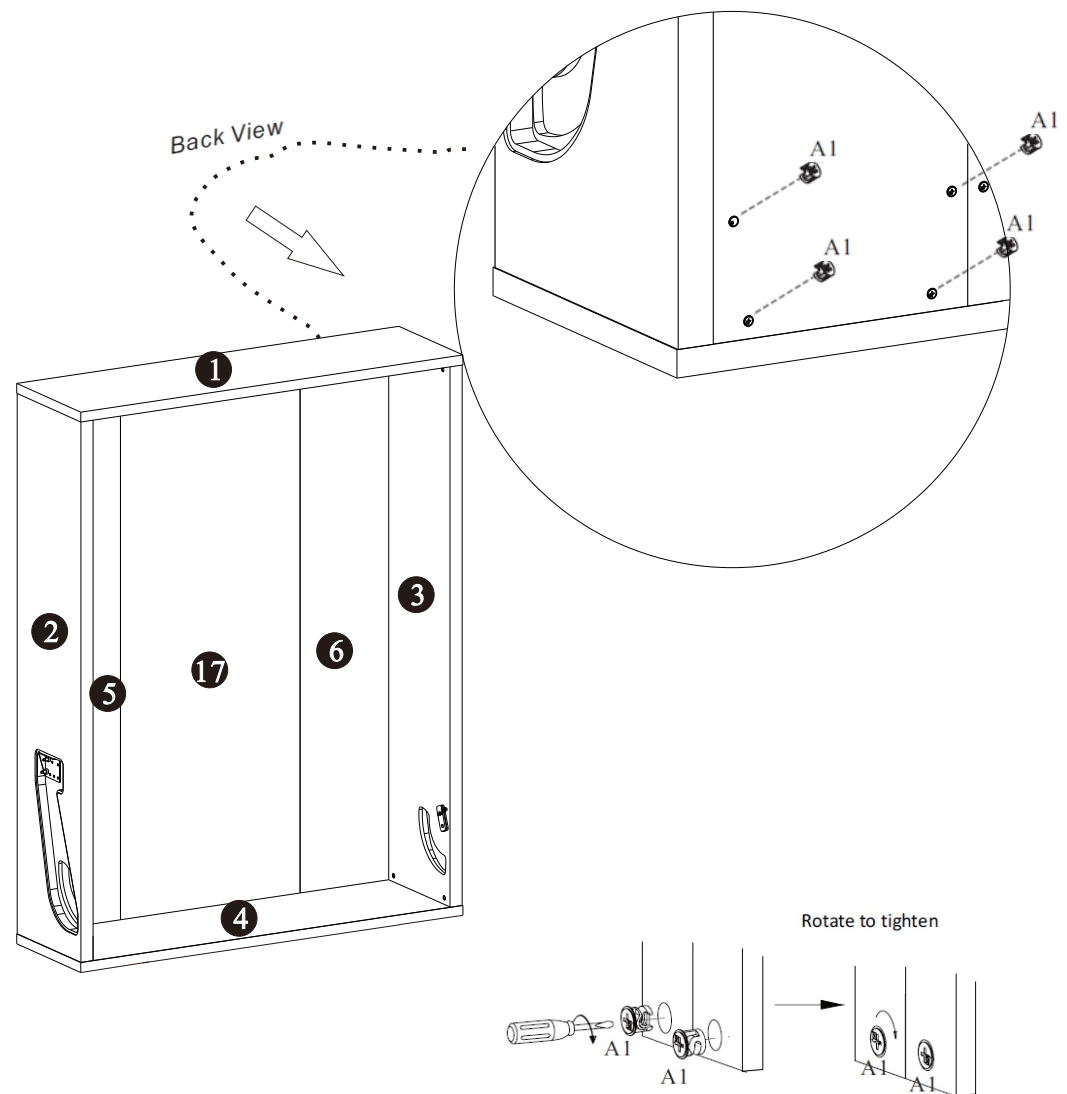


Step 4

- 

A13
(2PCS)
(50*0.6)
- 

B13
(2PCS)
(50*1.0)
- 

C13
(2PCS)
(50*1.5)

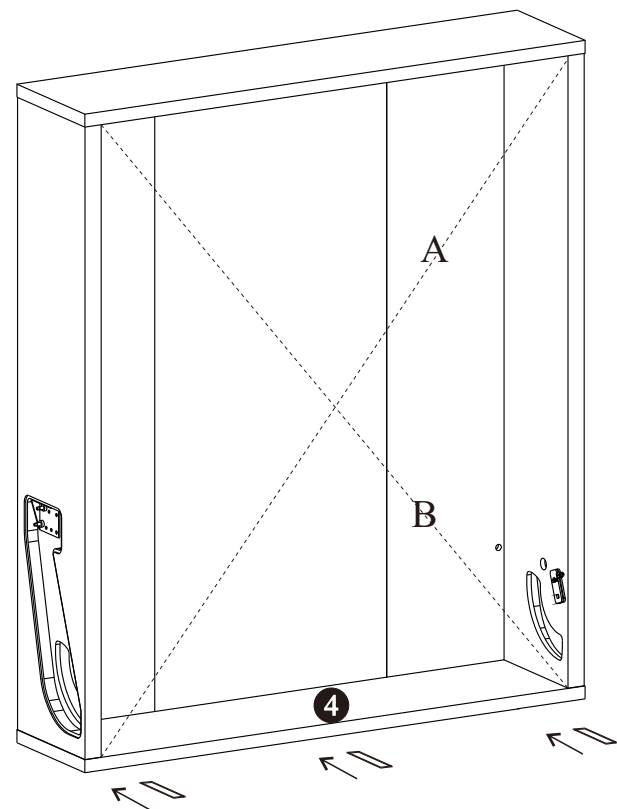


A = B √
A ≠ B ×

Step 17

- 


L1
(8PCS)
(D3*16)

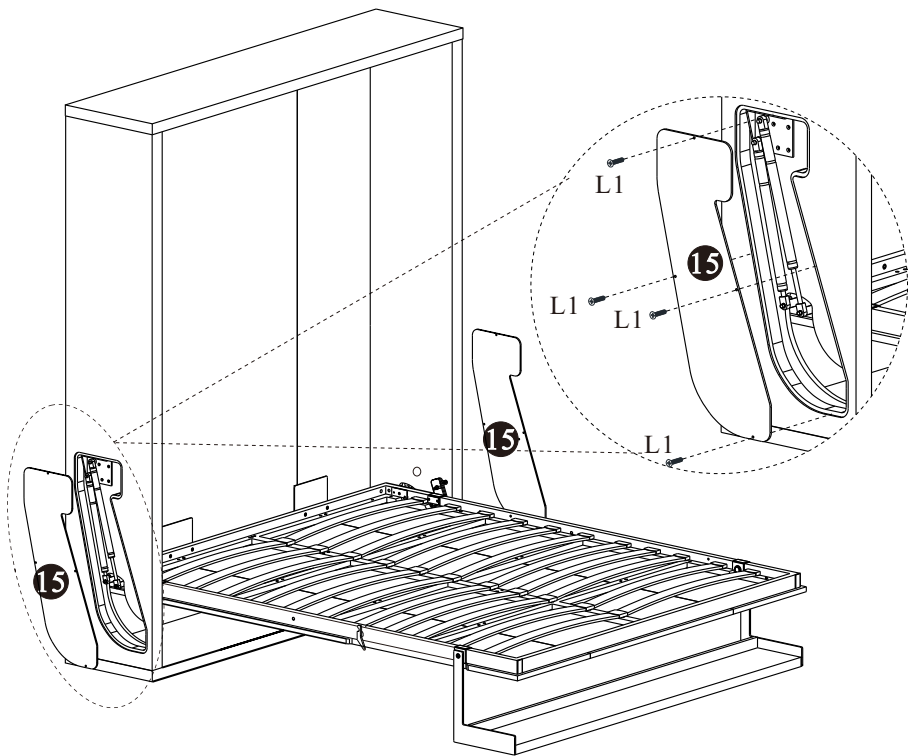



Step 16





WARNING:
WATCH YOUR HAND

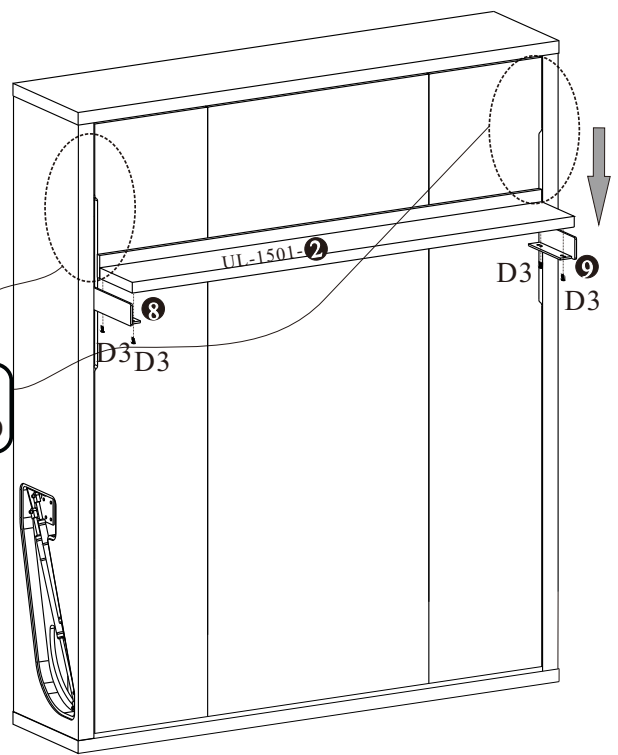


Step 5

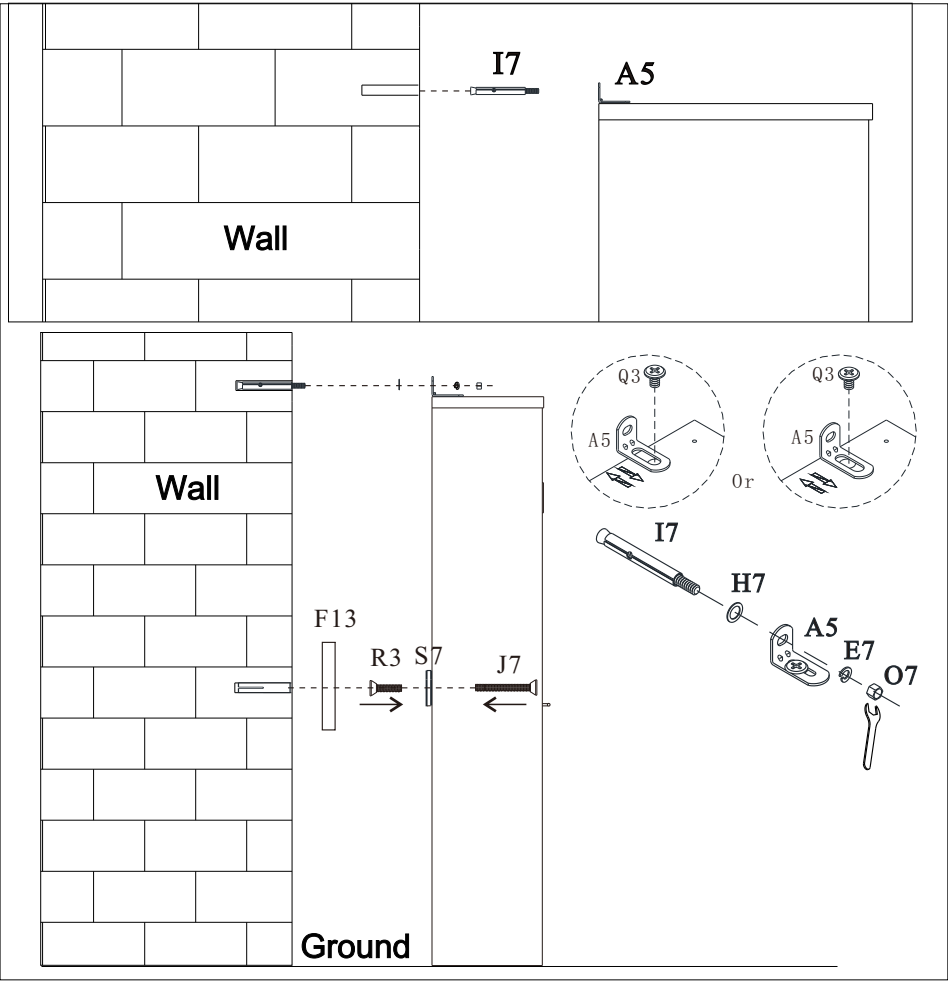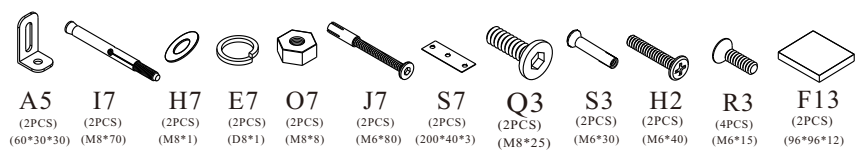

Step 6

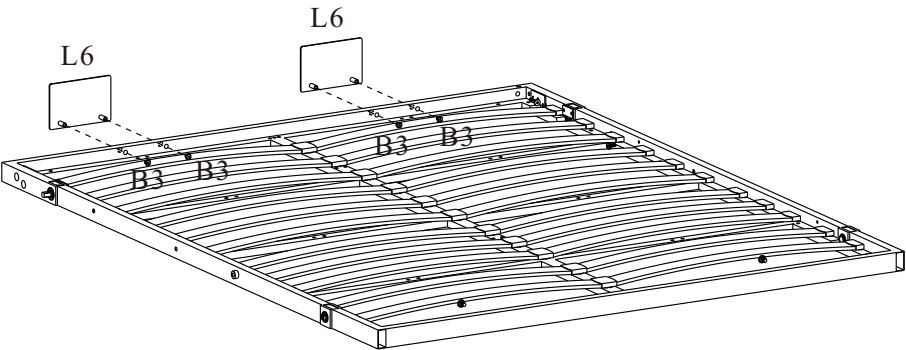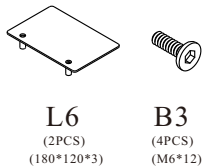

Step 15

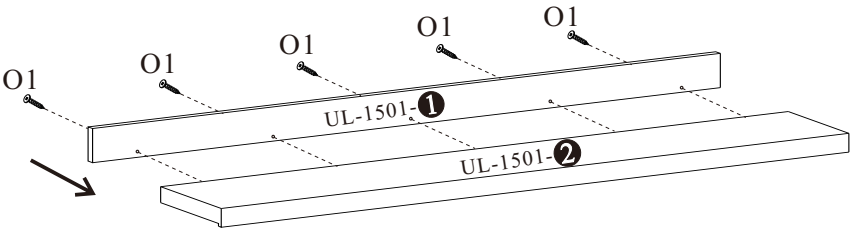


Step 14



F7
(38PCS)
(M6)

F3
(38PCS)
(M6*30)

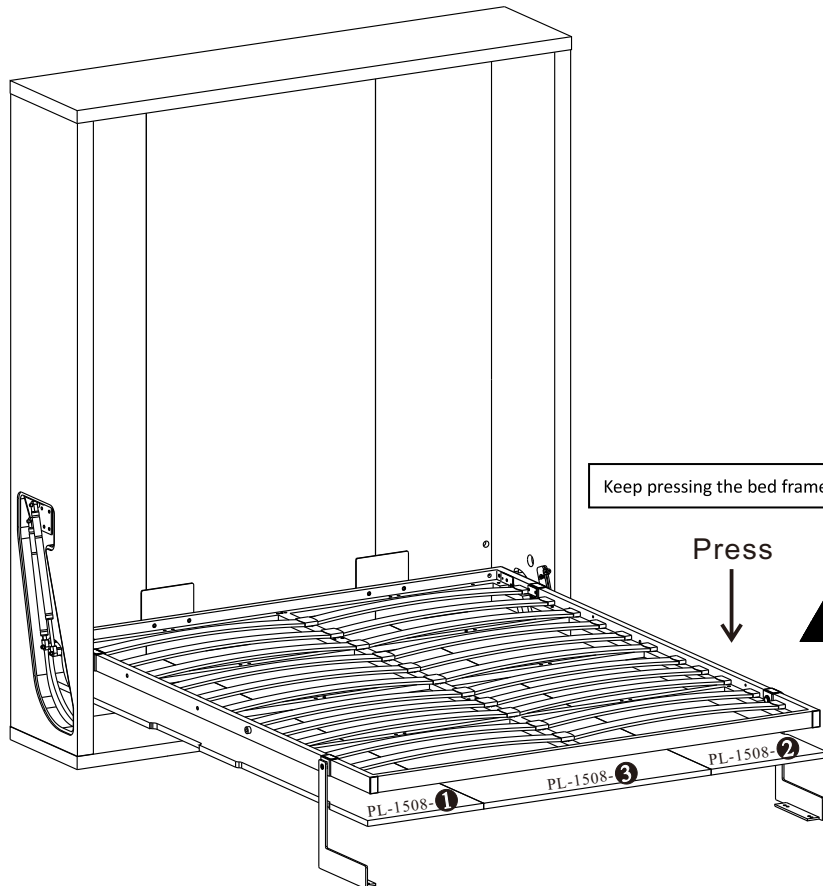

Fold down bed frame. Maintain in prone position by means of some weights. Fasten face fronts using screws (F3) and washers (F7).

Step 7

Bedframe Fitting



F3
(2PCS)
(M6*30)

Pre-assembled Fitting



AZ1
(2PCS)
(D14.7*58)



AZ2
(2PCS)
(D19*48)



AZ3
(4PCS)
(D33*10)




AZ5
(2PCS)
(D20*7)



Az15
(2PCS)
(M6)


White Line

Find out the white line marked on the gear rack, and then put the gear right on the white line, with the white line on gear AZ3 in the same direction as the gear rack.

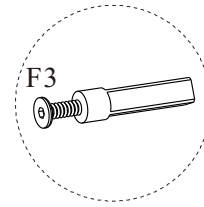


Square Hole



Find out the white line marked on the gear rack, and then put the gear right on the white line, with the square hole of the gear AZ3 horizontal

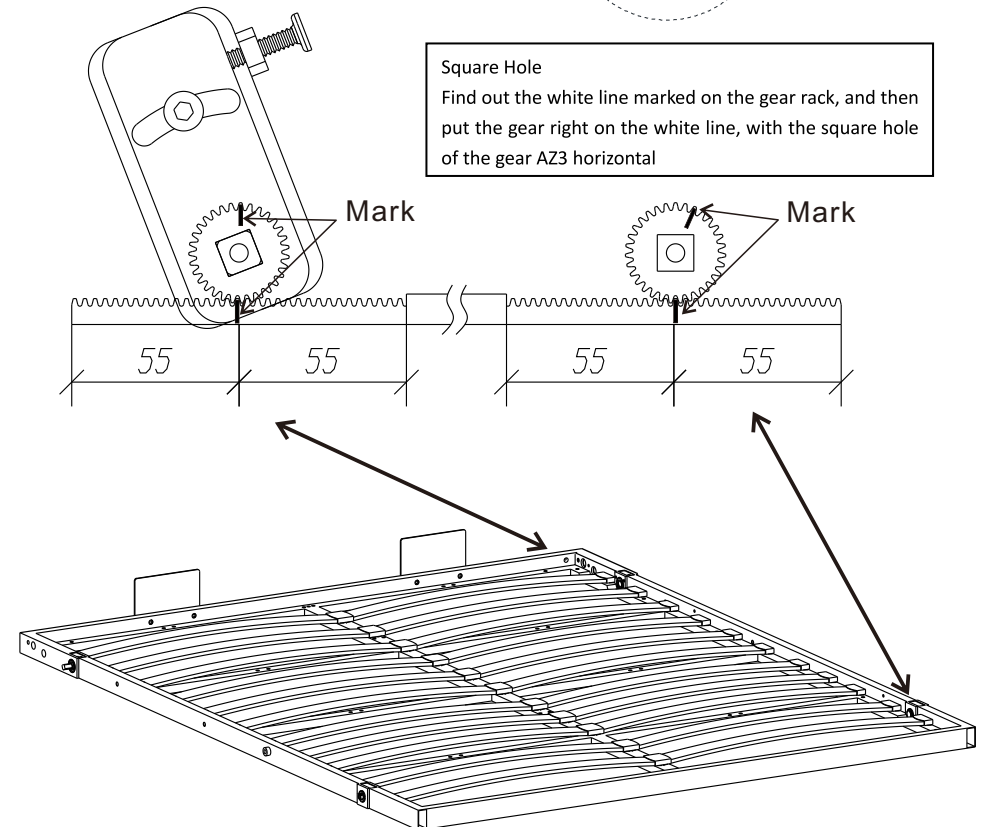


Step 8 Bedframe Fitting

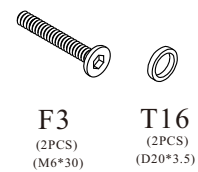



Pre-assembled Fitting

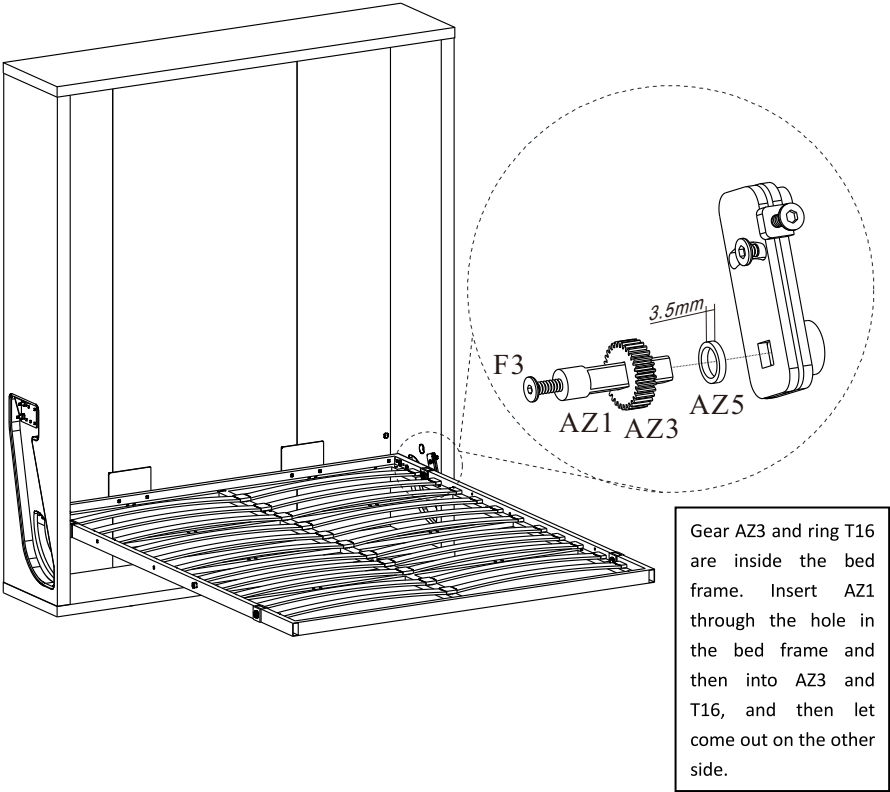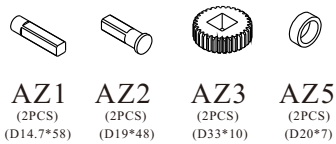

Step 13 Bedframe Fitting

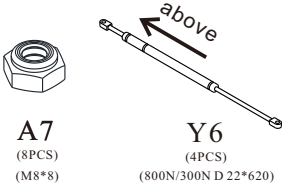

Pre-assembled Fitting

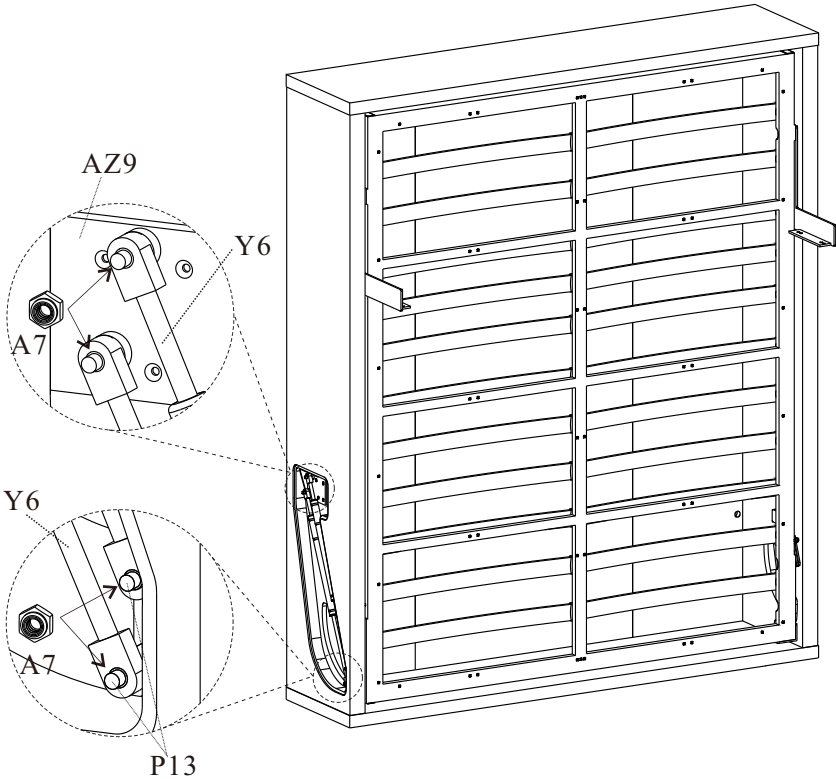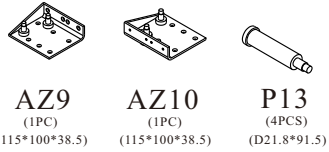

Step 12


- 

P5
(4PCS)
(42*21*5)
- 

I6
(3PCS)
(51*26*5)
- 

N15
(1PCS)
(87*53.7*58)
- 

O15
(4PCS)
(60*34*10)

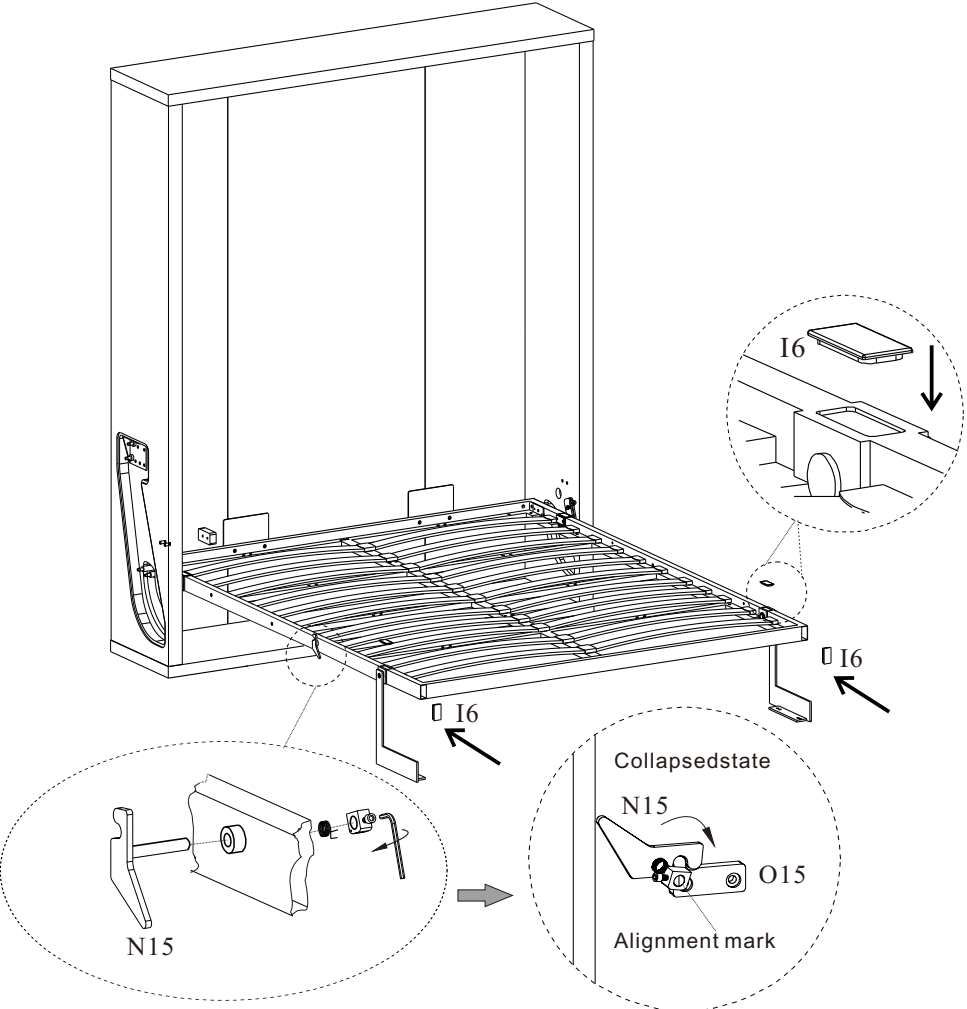

Step 9


- 

AZ2
(2PCS)
(D19*48)
- 



AZ3
(2PCS)
(D33*10)
- 

AZ13
(2PCS)
(M8*15)
- 



AZ5
(2PCS)
(D20*7)

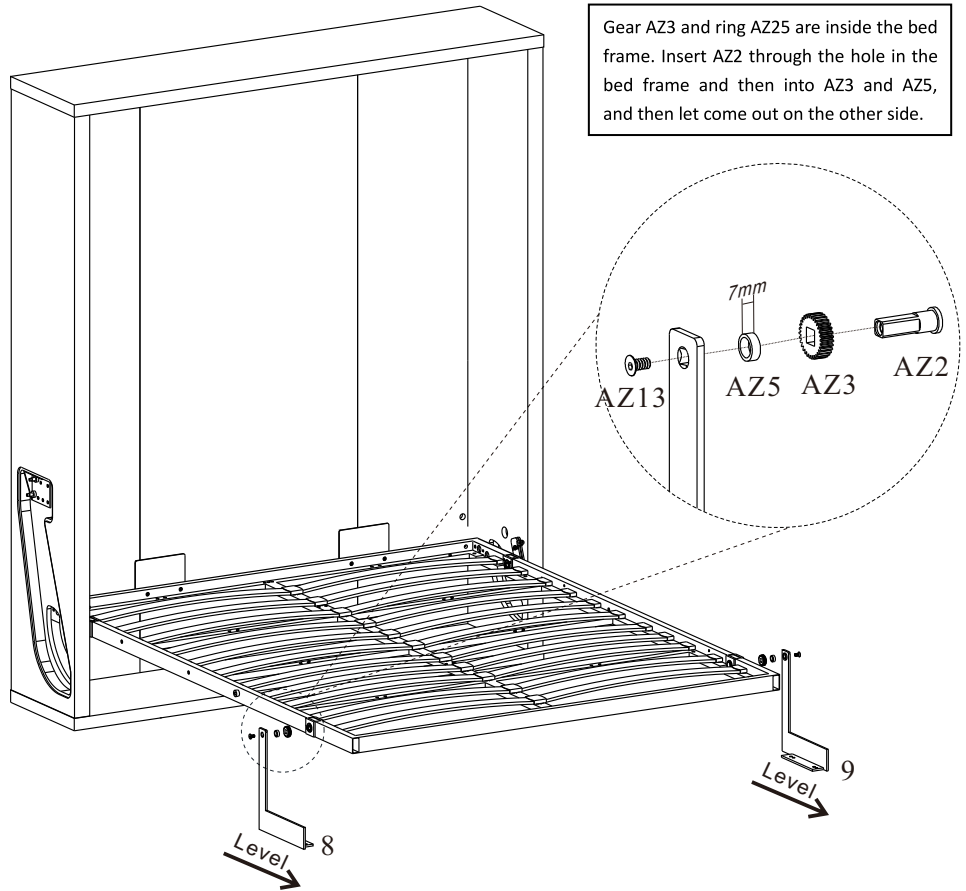

Step 10

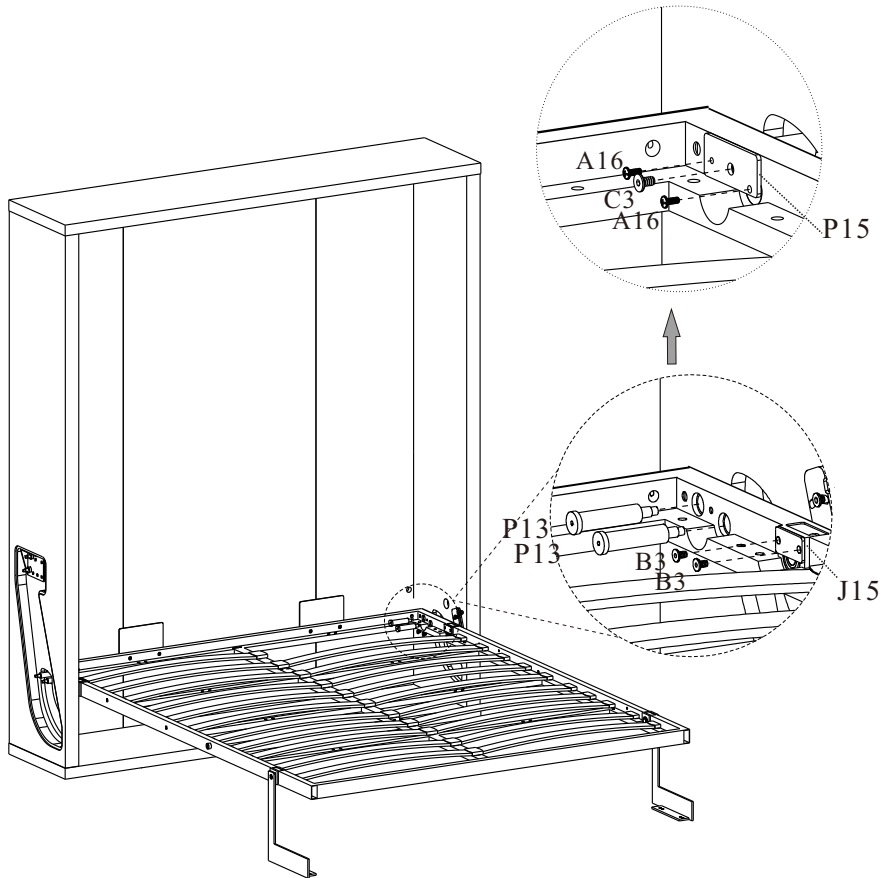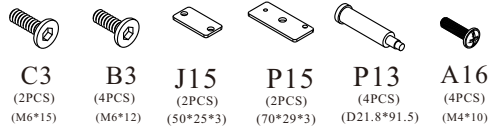

Step 11

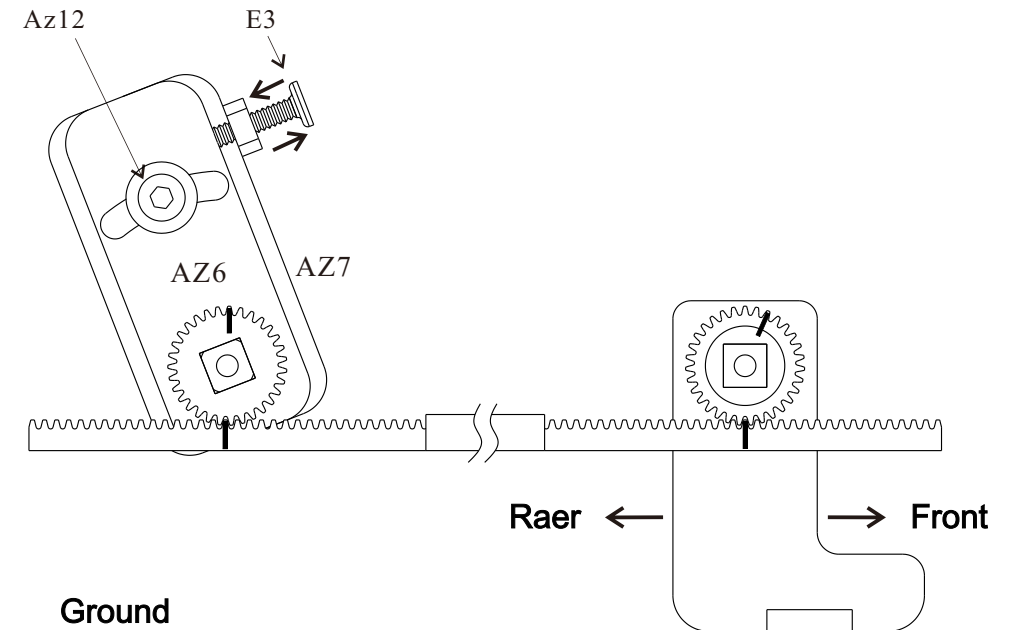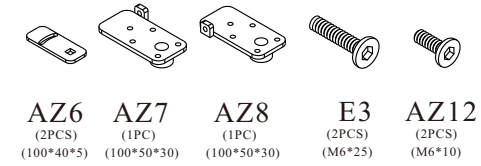

Ground

1. If shelf holders lean backward, loosen hex cap screw (AZ12) by using Allen Key, then drive hex socket head cap screw (AZ11) with Allen Key to press adjustment disc (AZ6) till holders become horizontal. Fasten (AZ12) using Allen Key.
2. If shelf holders lean forward, loosen hex cap screw (AZ12) using Allen Key then extract (AZ11) slightly. Adjust holder till they become horizontal. Fasten (AZ12) then drive (AZ11).