DZ-SK09-QU
854*396*2265H

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
					φ3*16*8		M6*10		M6*70			M6*5	940mm	620mm

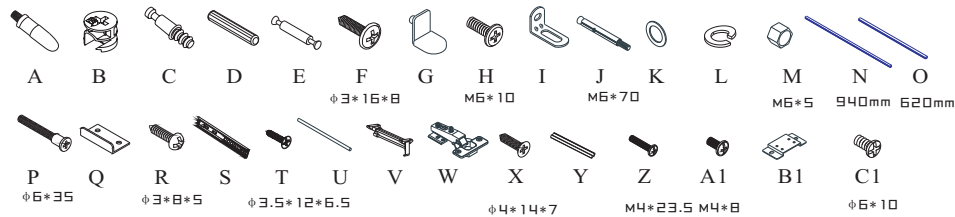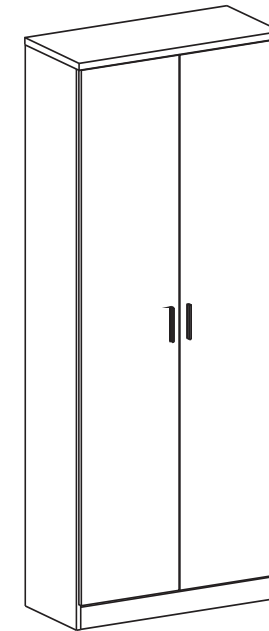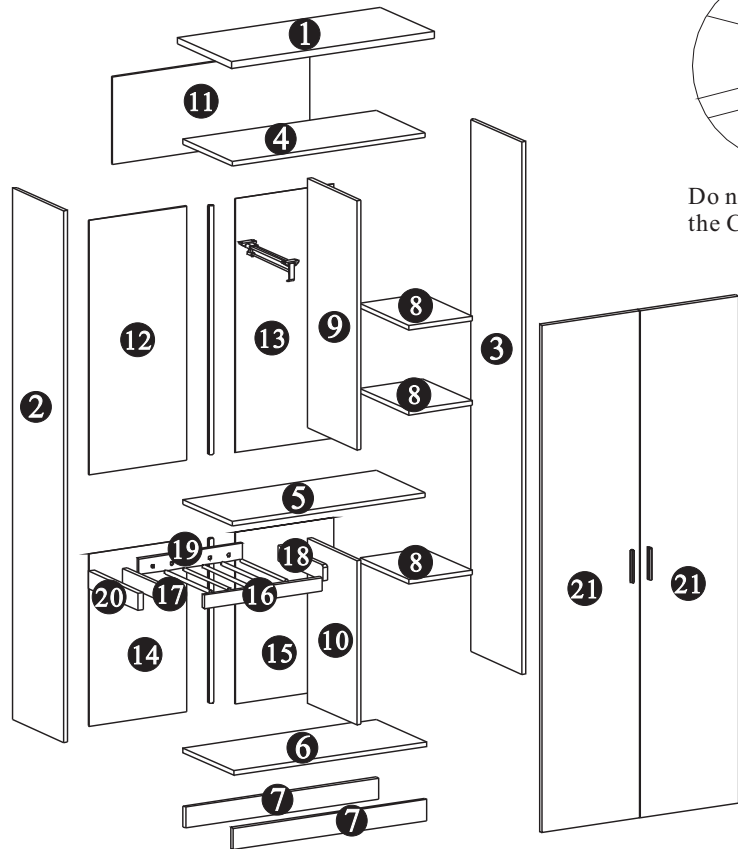| P	Q	R	S	T	U	V	W	X	Y	Z	A1	B1	C1
φ6*35		φ3*8*5		φ3.5*12*6.5				φ4*14*7		M4*23.5	M4*8		φ6*10

Do not put the Dowels in the Cam Screw holes!

ASSEMBLY INSTRUCTION

Packing cartons: A+B (2 cartonS)
Letter is stand for hardware, Number is stand for panel part
Step 1: put hardware B, C, D,E into the corresponding hole and
then apply little A to D
Step 2: Connect part 7 with part 6,
Connect part 5 with part9,10
Connect part 4 with part9
Connect part 2,3, with part4,5,6,7,9,10,
Connect part11,12,13,14,15, with part2,3
Use hardware P go through hardware 20 to connect part 2
Use hardware C1go through hardware B1 to connect part 2,3
Use hardware Xgo through hardware W to connect part B1
Use hardware A1go through hardware W to connect part 21
Connect part19 with part 17,18
Connect part 16,Uwith part 17,18,19
Use hardware T go through hardware S to connect part 17,18
Use hardware T go through hardware S to connect part 10,20
Use hardware Ginto the hole of part2,3,9,10
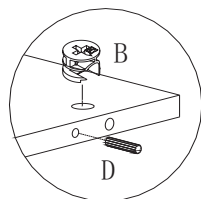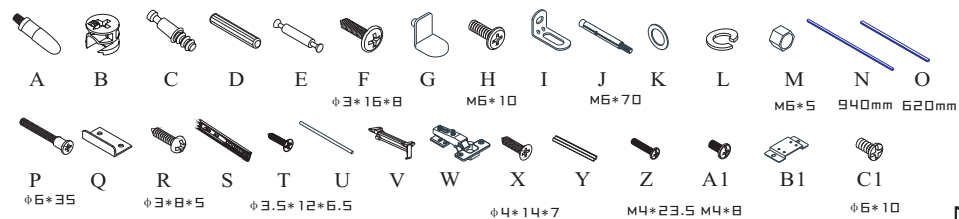Use hardware X go through hardwareV to connect part 4
Use hardware Rgo through hardware Q to connect part 4
Use hardware Zgo through hardware 21 to connect part Y
Step 3: put part8into the right position

F-32-05A

DZ-SK09-QU
854*396*2265H

A B C D E F G H I J K L M N O
φ3*16*8   M6*10   M6*70   M6*5   940mm 620mm

P Q R S T U V W X Y Z A1 B1 C1
φ6*35   φ3*8*5   φ3.5*12*6.5   φ4*14*7   M4*23.5 M4*8   φ6*10

B
O
D

Do not put the Dowels in
the Cam Screw holes!

F-32-05A